

## Features

- Broad range of sizes and styles
- Manufactured from CA 360, CA 345 or CA 377 brass rod
- Connectors, unions, nuts, elbows and tees



## Specifications

| Product                         | Working Pressure (psi) | Temp. Range    | Media   |
|---------------------------------|------------------------|----------------|---|
| <b>Brass Hose Barb Fittings</b> | 150 maximum            | -40° to +160°F | Air and liquids compatible with materials of construction |


## Ordering Information

- Brass hose barb fittings are sold in package quantities, please refer to part number listing for package information.
- Contact factory for special size or configuration.


## How to Install Hose Barb Fittings



Trim hose square; outer diameter must be free of score marks, burrs and sharp edges.

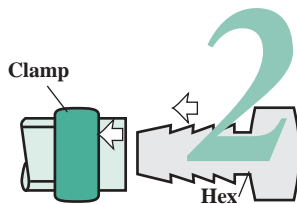

Slide hose clamp onto hose, lubricate hose and insert fitting barb completely- hose should touch stop ring or hex.

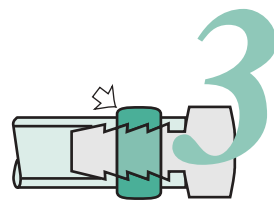

Slide hose clamp over hose/barb; tighten the clamp.



## HOSE BARB (MALE)

| Part No.                    | ID Hose | NPT(M) | Pkg |
|-----------------------------|---------|--------|-----|
| <a href="#">PC125H-22</a>   | 1/8     | 1/8    | 20  |
| <a href="#">PC125H-32</a>   | 3/16    | 1/8    | 20  |
| <a href="#">PC125H-42</a>   | 1/4     | 1/8    | 20  |
| <a href="#">PC125H-44</a>   | 1/4     | 1/4    | 20  |
| <a href="#">PC125H-46</a>   | 1/4     | 3/8    | 20  |
| <a href="#">PC125H-52</a>   | 5/16    | 1/8    | 20  |
| <a href="#">PC125H-54</a>   | 5/16    | 1/4    | 20  |
| <a href="#">PC125H-56</a>   | 5/16    | 3/8    | 20  |
| <a href="#">PC125H-62</a>   | 3/8     | 1/8    | 20  |
| <a href="#">PC125H-64</a>   | 3/8     | 1/4    | 20  |
| <a href="#">PC125H-66</a>   | 3/8     | 3/8    | 20  |
| <a href="#">PC125H-68</a>   | 3/8     | 1/2    | 10  |
| <a href="#">PC125H-84</a>   | 1/2     | 1/4    | 10  |
| <a href="#">PC125H-86</a>   | 1/2     | 3/8    | 10  |
| <a href="#">PC125H-88</a>   | 1/2     | 1/2    | 10  |
| <a href="#">PC125H-106</a>  | 5/8     | 3/8    | 10  |
| <a href="#">PC125H-108</a>  | 5/8     | 1/2    | 10  |
| <a href="#">PC125H-128</a>  | 3/4     | 1/2    | 5   |
| <a href="#">PC125H-812</a>  | 1/2     | 3/4    | 10  |
| <a href="#">PC125H-1012</a> | 5/8     | 3/4    | 10  |
| <a href="#">PC125H-1212</a> | 3/4     | 3/4    | 5   |
| <a href="#">PC125H-1616</a> | 1       | 1      | 5   |



## HOSE BARB (FEMALE)

| Part No.                  | ID Hose | NPT (F) | Pkg |
|---------------------------|---------|---------|-----|
| <a href="#">PC126H-42</a> | 1/4     | 1/8     | 20  |
| <a href="#">PC126H-44</a> | 1/4     | 1/4     | 20  |
| <a href="#">PC126H-46</a> | 1/4     | 3/8     | 20  |
| <a href="#">PC126H-52</a> | 5/16    | 1/8     | 20  |
| <a href="#">PC126H-54</a> | 5/16    | 1/4     | 20  |
| <a href="#">PC126H-56</a> | 5/16    | 3/8     | 20  |
| <a href="#">PC126H-62</a> | 3/8     | 1/8     | 20  |
| <a href="#">PC126H-64</a> | 3/8     | 1/4     | 20  |
| <a href="#">PC126H-66</a> | 3/8     | 3/8     | 20  |
| <a href="#">PC126H-68</a> | 3/8     | 1/2     | 20  |
| <a href="#">PC126H-86</a> | 1/2     | 3/8     | 10  |
| <a href="#">PC126H-88</a> | 1/2     | 1/2     | 10  |



## HOSE END, SWIVEL

| Part No.                 | NPT(M) | ID      | Pkg |
|--------------------------|--------|---------|-----|
| <a href="#">PCMSR-22</a> | 1/4    | .160 ID | 1   |
| <a href="#">PCMSR-44</a> | 1/4    | .245 ID | 1   |
| <a href="#">PCMSR-64</a> | 1/4    | 3/8 ID  | 1   |
| <a href="#">PCMSR-66</a> | 3/8    | 3/8 ID  | 1   |

*Replacement fitting for coil drop tubing  
(How to install page 92)*

## Hose Barb Fittings



### ELL, HOSE BARB (MALE)

| Part No.                   | ID Hose | NPT(M) | Pkg |
|----------------------------|---------|--------|-----|
| <a href="#">PC127H-42</a>  | 1/4     | 1/8    | 10  |
| <a href="#">PC127H-44</a>  | 1/4     | 1/4    | 10  |
| <a href="#">PC127H-52</a>  | 5/16    | 1/8    | 10  |
| <a href="#">PC127H-54</a>  | 5/16    | 1/4    | 10  |
| <a href="#">PC127H-62</a>  | 3/8     | 1/8    | 10  |
| <a href="#">PC127H-64</a>  | 3/8     | 1/4    | 10  |
| <a href="#">PC127H-66</a>  | 3/8     | 3/8    | 5   |
| <a href="#">PC127H-68</a>  | 3/8     | 1/2    | 5   |
| <a href="#">PC127H-84</a>  | 1/2     | 1/4    | 5   |
| <a href="#">PC127H-86</a>  | 1/2     | 3/8    | 5   |
| <a href="#">PC127H-106</a> | 5/8     | 3/8    | 10  |
| <a href="#">PC127H-108</a> | 5/8     | 1/2    | 10  |



### ELL, HOSE BARB 45°

| Part No.                   | ID Hose | NPT(M) | Pkg |
|----------------------------|---------|--------|-----|
| <a href="#">PC128H-42</a>  | 1/4     | 1/8    | 10  |
| <a href="#">PC128H-52</a>  | 5/16    | 1/8    | 10  |
| <a href="#">PC128H-54</a>  | 5/16    | 1/4    | 10  |
| <a href="#">PC128H-62</a>  | 3/8     | 1/8    | 10  |
| <a href="#">PC128H-64</a>  | 3/8     | 1/4    | 10  |
| <a href="#">PC128H-66</a>  | 3/8     | 3/8    | 5   |
| <a href="#">PC128H-84</a>  | 1/2     | 1/4    | 5   |
| <a href="#">PC128H-86</a>  | 1/2     | 3/8    | 5   |
| <a href="#">PC128H-106</a> | 5/8     | 3/8    | 10  |



### HOSE MENDER

| Part No.                 | ID Hose | Pkg |
|--------------------------|---------|-----|
| <a href="#">PC138H-3</a> | 3/16    | 20  |
| <a href="#">PC138H-4</a> | 1/4     | 20  |
| <a href="#">PC138H-5</a> | 5/16    | 20  |
| <a href="#">PC138H-6</a> | 3/8     | 10  |
| <a href="#">PC138H-8</a> | 1/2     | 10  |



### PUSH-ON HOSE

| Part No.                   | ID Hose | NPT(M) | Pkg |
|----------------------------|---------|--------|-----|
| <a href="#">PC125PH-42</a> | 1/4     | 1/8    | 10  |
| <a href="#">PC125PH-44</a> | 1/4     | 1/4    | 10  |
| <a href="#">PC125PH-46</a> | 1/4     | 3/8    | 10  |
| <a href="#">PC125PH-62</a> | 3/8     | 1/8    | 10  |
| <a href="#">PC125PH-64</a> | 3/8     | 1/4    | 10  |
| <a href="#">PC125PH-66</a> | 3/8     | 3/8    | 5   |
| <a href="#">PC125PH-84</a> | 1/2     | 1/4    | 5   |
| <a href="#">PC125PH-86</a> | 1/2     | 3/8    | 5   |
| <a href="#">PC125PH-88</a> | 1/2     | 1/2    | 5   |

Contact factory for female connector